

How to Identify a Fontaine fifth wheel

Look for the model number on a tag located on the front band of the top plate.

For recommended maintenance and parts identification you must determine which top plate you have. Apply the Model Number from front tag to the Part Number Identification Guide shown below:

Model number location



SL7LWB675012

Release

- SL** = Side left
- SR** = Side right
- AA** = Air actuated
- BL** = Blocked left¹
- AL** = Auto-lube left
- SLE** = Electronic lock indicator left²
- SLL** = Manual lock indicator left²

¹7000 & H5092 model only
²7000 model only

Top plate model

- 7** = No-Slack® II 7000
- C** = 7000CC Clean Connect
- 4** = Ultra LT
- 6** = No-Slack® II 6000
- H** = No-Slack® H5092
- NT** = No-Slack® II NT

Mounting Bracket model

- LWB** = Light weight slide bracket
- LWO** = Light weight outboard slide
- AWB** = Air slide bracket
- APB** = Adjustable plate mount
- BSM** = Stationary bracket mount
- ATB** = Air slide bracket
- PMA** = Adjustable plate mount
- PS4** = Stationary short plate mount
- PS5** = Stationary short plate mount

Mounting height

6750 = 6-3/4"
Actual height from truck frame to top of fifth wheel.

- Examples:
- 7125 = 7-1/8"
 - 7250 = 7-1/4"
 - 8375 = 8-3/8"
 - 9750 = 9-3/4"

Slide travel

12 = 12" slide
Sliding fifth wheels only.

- Examples:
- 12 = 12" slide
 - 24 = 24" slide
 - 36 = 36" slide
 - 48 = 48" slide

If you cannot find the model number, look for the serial number (always nine digits) stamped into the right side of the fifth wheel (see below) and call 800-874-9780 and someone will be able to tell you the model number.



Serial number engraved directly into the right side of fifth wheel skirt. Note: position 5 and 6 of the serial number indicates the year built. Serial number is always 9 digits.

No-Slack® II right side view serial number location