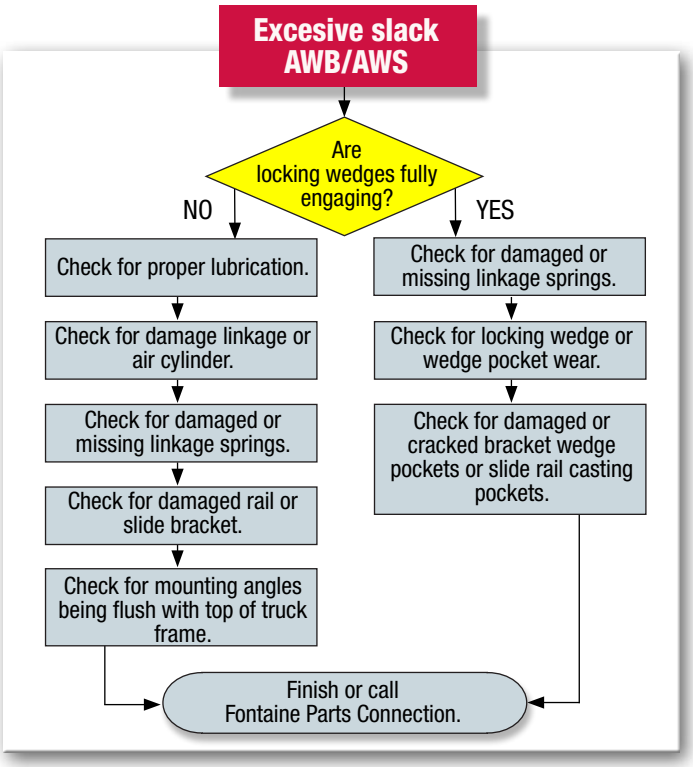
Excesive slack AWB/AWS
Are locking wedges fully engaging?
NO
YES
Check for proper lubrication.
Check for damage linkage or air cylinder.
Check for damaged or missing linkage springs.
Check for damaged rail or slide bracket.
Check for mounting angles being flush with top of truck frame.
Check for damaged or missing linkage springs.
Check for locking wedge or wedge pocket wear.
Check for damaged or cracked bracket wedge pockets or slide rail casting pockets.
Finish or call Fontaine Parts Connection.